

### L611VB

Single Faucet, Deck Mounted,  
Vacuum Breaker



**Application:** Deck mounted faucet with vacuum breaker for cold water.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained compression valve unit with replaceable stainless steel seat.

**Handle:** Forged brass four-arm handle with color-coded index disc.

**Gooseneck:** 6" rigid gooseneck. Gooseneck is set in right hand configuration unless left hand or 180 degrees is specified.

**Vacuum Breaker:** Integral vacuum breaker to prevent backflow. Vacuum breaker has replaceable seat and ultra-light float cup to resist spilling at low flow.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer. 3/8" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Model


**L612VB:** Same as above except with swing gooseneck.

**L614VB:** Same as above except with convertible rigid/swing gooseneck.

**Note:** If vacuum breaker is not required, delete suffix "VB".

### L611VB-BH

Single Faucet, Deck Mounted,  
Vacuum Breaker and Blade Handle

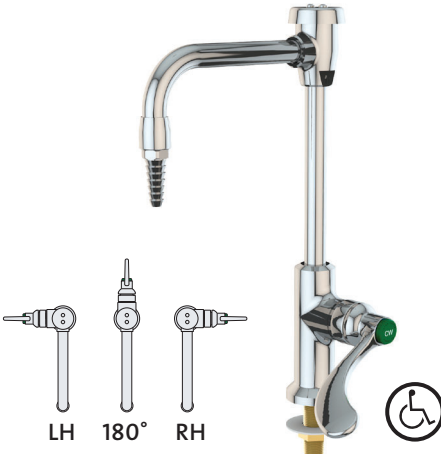

**Application:** Deck mounted faucet with vacuum breaker and wrist blade handle for cold water.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained compression valve unit with replaceable stainless steel seat.

**Handle:** Forged brass wrist blade handle with color-coded index disc.

**Gooseneck:** 6" rigid gooseneck. Gooseneck is set in right hand configuration unless left hand or 180 degrees is specified.

**Vacuum Breaker:** Integral vacuum breaker to prevent backflow. Vacuum breaker has replaceable seat and ultra-light float cup to resist spilling at low flow.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer. 3/8" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Models

**L612VB-BH:** Same as above except with swing gooseneck.

**L614VB-BH:** Same as above except with rigid/swing gooseneck.

**Note:** If vacuum breaker is not required, delete suffix "VB".

### L2714VB-WSA

Single Faucet, Panel Mounted,  
Vacuum Breaker



**Application:** Panel mounted faucet with vacuum breaker for cold water.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained compression valve unit with replaceable stainless steel seat.

**Handle:** Forged brass four-arm handle with color-coded index disc.

**Gooseneck:** 6" rigid/swing gooseneck.

**Vacuum Breaker:** Integral vacuum breaker to prevent backflow. Vacuum breaker has replaceable seat and ultra-light float cup to resist spilling at low flow.

**Inlet:** Furnished with 1/2" IPS mounting shank (assembled), locknut and washer. 1/2" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Model

**L2714L-VB-WSA:** Same as above except with handle on left side.

**Note:** If vacuum breaker is not required, delete suffix "VB".

If mounting shank is to be unassembled, use suffix "WS".