

### L681

Pure Water Faucet, Deck Mounted,  
Self-Closing Control



**Application:** Deck mounted faucet for distilled, deionized or reverse osmosis water. All components in contact with water have interior lining of pure tin.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained renewable unit with replaceable stainless steel seat. Valve has self-closing control.

**Handle:** Forged brass four-arm self-closing handle with color-coded index disc.

**Gooseneck:** 6" rigid gooseneck. Gooseneck is set in right hand configuration unless left hand or 180 degrees is specified.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer. 3/8" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Models

**L682:** Same as above except with swing gooseneck.

**L684:** Same as above except with convertible rigid/swing gooseneck.

**Note:** If self-closing lever handle is required, add suffix "LE".

### L691

Pure Water Faucet, Deck Mounted,  
Manual Control



**Application:** Deck mounted faucet for distilled, deionized or reverse osmosis water. All components in contact with water have interior lining of pure tin.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained renewable unit with replaceable stainless steel seat. Valve has manual on/off control.

**Handle:** Forged brass four-arm handle with color-coded index disc.

**Gooseneck:** 6" rigid gooseneck. Gooseneck is set in right hand configuration unless left hand or 180 degrees is specified.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer. 3/8" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Models


**L692:** Same as above except with swing gooseneck.

**L694:** Same as above except with convertible rigid/swing gooseneck.

**Note:** If wrist blade handle is required, add suffix "BH".

### L2800-131WSA-TL

Pure Water Valve, Deck Mounted

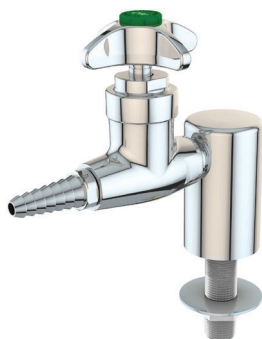

**Application:** Deck mounted valve for distilled, deionized or reverse osmosis water. All components in contact with water have interior lining of pure tin.

**Mounting:** Deck mounted turret base with single outlet.

**Valve Body:** Straight pattern forged brass.

**Valve Unit:** WaterSaver self-contained compression valve unit with replaceable stainless steel seat.

**Handle:** Forged brass four-arm handle with color-coded index disc.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer. 3/8" NPT male inlet.

**Outlet:** 3/8" NPT female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Fixture is fully assembled and factory tested prior to shipment.

#### Additional Model

**L2800-132WSA-TL:** Same as above except with two valves at 180 degrees.

#### Options for Tin-Lined Pure Water Faucets

**Gooseneck:** 8" spread gooseneck in place of 6" (add suffix "8"). For other gooseneck spreads and heights, please refer to page 56.

**Vacuum Breaker:** Gooseneck with integral vacuum breaker (add suffix "VB").

**Outlet:** BO055 aerator in place of serrated hose end (add suffix "55").

### L2784WSA

Pure Water Faucet, Panel Mounted, Self-Closing Control



**Application:** Panel mounted faucet for distilled, deionized or reverse osmosis water. All components in contact with water have interior lining of pure tin.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained renewable unit with replaceable stainless steel seat. Valve has self-closing control.

**Handle:** Forged brass four-arm self-closing handle with color-coded index disc.

**Gooseneck:** 6" rigid/swing gooseneck.

**Inlet:** Furnished with 1/2" IPS mounting shank (assembled), locknut and washer. 1/2" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Model

**L2784L-WSA:** Same as above except with handle on left side.

**Note:** If self-closing lever handle is required, add suffix "LE".

If mounting shank is to be unassembled, use suffix "WS".

### L2794WSA

Pure Water Faucet, Panel Mounted, Manual Control



**Application:** Panel mounted faucet for distilled, deionized or reverse osmosis water. All components in contact with water have interior lining of pure tin.

**Body:** Forged brass.

**Valve Unit:** WaterSaver self-contained renewable unit with replaceable steel seat. Valve has manual on/off control.

**Handle:** Forged brass four-arm handle with color-coded index disc.

**Gooseneck:** 6" rigid/swing gooseneck.

**Inlet:** Furnished with 1/2" IPS mounting shank (assembled), locknut and washer. 1/2" NPT male inlet.

**Outlet:** 3/8" NPS female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Model


**L2794L-WSA:** Same as above except with handle on left side.

**Note:** If wrist blade handle is required, add suffix "BH".

If mounting shank is to be unassembled, use suffix "WS".

### L5100F-225WSA-TL

Pure Water Valve, Panel Mounted

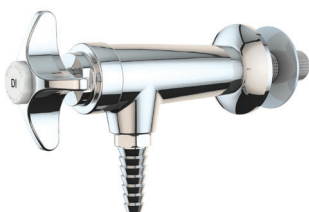

**Application:** Panel mounted valve for distilled, deionized or reverse osmosis water. All components in contact with water have interior lining of pure tin.

**Mounting:** For installation on vertical or horizontal surfaces (such as pipe chases or service carriers) where there is access behind surface during installation.

**Valve Body:** Angle pattern forged brass.

**Valve Unit:** WaterSaver self-contained compression valve unit with replaceable stainless steel seat.

**Handle:** Forged brass four-arm handle with color-coded index disc.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer. 3/8" NPT male inlet.

**Outlet:** 3/8" NPT female outlet with removable anti-splash serrated hose end.

**Quality Assurance:** Fixture is fully assembled and factory tested prior to shipment.

#### Additional Model

**L5100FT-325TL:** Same as above except with adjustable escutcheon for wall mounting.

#### Options for Tin-Lined Pure Water Faucets

**Gooseneck:** 8" spread gooseneck in place of 6" (add suffix "8"). For other gooseneck spreads and heights, please refer to page 56.

**Vacuum Breaker:** Gooseneck with integral vacuum breaker (add suffix "VB").

**Outlet:** BO055 aerator in place of serrated hose end (add suffix "55").

### L7833

Pure Water Faucet, Polypropylene-Lined,  
Deck Mounted



**Application:** Deck mounted faucet for distilled, deionized or reverse osmosis water. Faucet has exterior brass casing and interior lining of inert polypropylene. Pure water comes in contact only with inert plastic.

**Valve Body:** Forged brass.

**Valve Unit:** Diaphragm-type valve with brass valve stem and bonnet and inert PTFE diaphragm. Valve has manual on/off control.

**Handle:** White nylon knurled handle with color-coded index disc.

**Riser:** 6" rigid brass riser.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer.

Pure water inlet is 3/8" OD polypropylene tube.

**Outlet:** Seven serration plastic hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Models


**L7833SC:** Same as above except with toggle-style lever handle and self-closing control.

**L7833MSC:** Same as above except with toggle-style lever handle and combination manual/self-closing control.

**Note:** If PVDF lining is required, add suffix "PVDF".

### L7834

Pure Water Faucet, Polypropylene-Lined,  
Panel Mounted

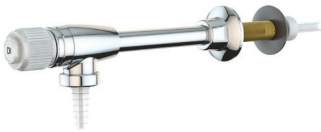

**Application:** Panel mounted faucet for distilled, deionized or reverse osmosis water. Faucet has exterior brass casing and interior lining of inert polypropylene. Pure water comes in contact only with inert plastic.

**Valve Body:** Forged brass.

**Valve Unit:** Diaphragm-type valve with brass valve stem and bonnet and inert PTFE diaphragm. Valve has manual on/off control.

**Handle:** White nylon knurled handle with color-coded index disc.

**Riser:** 6" rigid brass riser.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer.

Pure water inlet is 3/8" OD polypropylene tube.

**Outlet:** Seven serration plastic hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Models

**L7834SC:** Same as above except with toggle-style lever handle and self-closing control.

**L7834MSC:** Same as above except with toggle-style lever handle and combination manual/self-closing control.

**Note:** If PVDF lining is required, add suffix "PVDF".

### L7840

Pure Water Faucet, Polypropylene-Lined,  
Panel Mounted



**Application:** Panel mounted faucet for distilled, deionized or reverse osmosis water. Faucet has exterior brass casing and interior lining of inert polypropylene. Pure water comes in contact only with inert plastic.

**Valve Body:** Forged brass.

**Valve Unit:** Diaphragm-type valve with brass valve stem and bonnet and inert PTFE diaphragm. Valve has manual on/off control.

**Handle:** White nylon knurled handle with color-coded index disc.

**Inlet:** Furnished with 3/8" IPS mounting shank (assembled), locknut and washer.

Pure water inlet is 3/8" OD polypropylene tube.

**Outlet:** Seven serration plastic hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

#### Additional Models

**L7840SC:** Same as above except with toggle-style lever handle and self-closing control.

**L7840MSC:** Same as above except with toggle-style lever handle and combination manual/self-closing control.

**Note:** If PVDF lining is required, add suffix "PVDF".

#### Options for Plastic-Lined Pure Water Faucets

**Gooseneck:** 8" spread gooseneck in place of 6" (add suffix "8"). For other gooseneck spreads and heights, please refer to page 56.

**Vacuum Breaker:** In-line polypropylene vacuum breaker installed between valve and serrated hose end (add suffix "7110").

### L7853

Pure Water Faucet, Polypropylene-Lined, Deck Mounted



**Application:** Deck mounted faucet for distilled, deionized or reverse osmosis water. Faucet has exterior brass casing and interior lining of inert polypropylene. Pure water comes in contact only with inert plastic.

**Valve Body:** Forged brass.

**Valve Unit:** Diaphragm-type valve. Brass valve stem and bonnet with inert PTFE diaphragm. Valve has manual on/off control.

**Handle:** White nylon knurled handle with color-coded index disc.

**Gooseneck:** 6" rigid gooseneck.

**Inlet:** Furnished with 1-3/16" dia. mounting shank (assembled), locknut and washer. Pure water inlet is 1/2" OD polypropylene tube.

**Outlet:** Seven serration plastic hose end.

**Quality Assurance:** Fixture is fully assembled and factory tested prior to shipment.

#### Additional Models

**L7853SC:** Same as above except with self-closing four-arm handle.

**L7853SC-LE:** Same as above except with self-closing lever handle.

**Note:** If PVDF lining is required, add suffix "PVDF".

### L7854

Pure Water Faucet, Polypropylene-Lined, Panel Mounted



**Application:** Panel mounted faucet for distilled, deionized or reverse osmosis water. Faucet has exterior brass casing and interior lining of inert polypropylene. Pure water comes in contact only with inert plastic.

**Valve Body:** Forged brass.

**Valve Unit:** Diaphragm-type valve. Brass valve stem and bonnet with inert PTFE diaphragm. Valve has manual on/off control.

**Handle:** White nylon knurled handle with color-coded index disc.

**Gooseneck:** 6" rigid gooseneck.

**Inlet:** Furnished with 3/4" IPS mounting shank (assembled), locknut and washer. Pure water inlet is 1/4" NPT male thread.

**Outlet:** Seven serration plastic hose end.

**Quality Assurance:** Fixture is fully assembled and factory tested prior to shipment.

#### Additional Models

**L7854L:** Same as above except with handle on left side.

**L7854SC:** Same as above except with self-closing four-arm handle.

**L7854SC-LE:** Same as above except with self-closing lever handle.

**Note:** If PVDF lining is required, add suffix "PVDF".

### L7837

Recirculating Pure Water Faucet, Polypropylene-Lined, Deck Mounted



**Application:** Recirculating deck mounted faucet for distilled, deionized or reverse osmosis water. Faucet is fully recirculating to eliminate all "dead legs" in pure water system.

**Valve Body:** Forged brass.

**Valve Unit:** Diaphragm-type valve. Brass valve stem and bonnet with inert PTFE diaphragm. Valve has manual on/off control.

**Handle:** White nylon knurled handle with color-coded index disc.

**Riser:** 6" rigid brass riser.

**Inlet:** Furnished with 7/8" OD mounting shank (assembled), locknut and washer. Pure water supply and return connections are 3/8" OD polypropylene tube.

**Outlet:** Seven serration plastic hose end.

**Quality Assurance:** Faucet is fully assembled and factory tested prior to shipment.

**Note:** If PVDF lining is required, add suffix "PVDF".